

FAN HEATER
USER MANUAL



MODEL: FOX GR-110

READ ALL INSTRUCTIONS BEFORE USING

FEATURES



1. Adjustable thermostat
2. Switch
3. Indicator light
4. Air inlet
5. Air outlet

IMPORTANT SAFEGUARDS

Thank you for buying our product. Please attentively read this before operating the machine. Keep this operation manual for future reference.

1. Use the heater on flat surfaces not tilting or upsides down. No use underneath socket directly.
2. Do not use your heater in the presence of explosive or

flammable substance.

3. It is absolutely necessary ensure the following:
 - The socket is not used to the heater and other high power electrical appliance at a time.
 - The cord is rated for at least 10 AMPS.
 - Tight connection between plug and socket so as to avoid the overheating plug and malfunction.
 - Unplug heaters by grasping plug and pulling it from the socket. Never yank on cord.
 - Carefully use when children, old man, disabled man inside solely. No use when no supervision.
 - Our factory, if damaged manufactures the power cord and plug; Return the heater to the approved service agent for changing.
 - Caution: Do not drape anything on your heater when in use.

OPERATING UNSTRUCTIONS

1. Plug into any 220-240V AC~50/60 Hz.
2. Your heater is equipped with a 4-position rotary switch

SYMBOL	FUNCTION
0	OFF
*	BLOW COOLING AIR
I	HALF HEAT OUTPUT
II	FULL HEAT OUTPUT

3. Set the rotary switch to maximum for fast warm up of a room. Once the room is comfortable, select a lower setting to reduce electrical consumption and to prevent the room from becoming too warm.

4. Adjust the thermostat to maximum and select the desired power setting. Once the room is comfortable, rotate the thermostat counterclockwise, until the heater shuts off. The thermostat will now maintain the temperature by cycling the heater on or off. During particularly cold weather, the low power setting may be insufficient to satisfy the thermostat. Select a higher setting for these periods.
5. Before switching off and better work for 5-10 second in cool condition.

SAFETY CONTROL

To avoid damage and danger by overheating, your heater is fitted with super protector that switch as off the heater in the event of overheating until the temperature drops to some extent.

MAINTENANCE

1. When your heater needs cleaning, wipe exterior surfaces of the heater with a moistened cloth. Not rinse with water directly. Be sure to unplug before cleaning.
2. To prolong the heater life, not disassemble it personally when malfunction occurs. Send your heater to relative identification after-sold service center or provider for the convenience inspecting.

SPECIFICATIONS

Power supply:	220-240V~50/60Hz
Power regulation range	1000/2000W
Suitable area	15-20 m ²

SERVICE LIFE OF THE FAN HEATER

Not less than 1 years.

1.This appliance is not intended for use by persons(including children)with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2.Children should be supervised to ensure that they do not play with the appliance.

---- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

---- Children should be supervised to ensure that they do not play with the appliance.

----If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.

----WARNING: In order to avoid overheating, do not cover the heater.

----The instructions shall state that the heater must not be located immediately below a socket outlet.

----Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

----This heater is filled with a precise quantity of special oil. Repairs requiring opening of the container are only to be made by the manufacturer or his service agent who should be contracted if there is an oil leak



И 001 17

И 001 17



DO NOT COVER

NE PREKRIVAJ!